

---

---

ENGLISH

## Xbox 360 Rechargeable Battery Pack

---

Thanks for choosing the Xbox 360 Rechargeable Battery Pack.

Extra power means longer gameplay, and the Xbox 360 Rechargeable Battery Pack offers convenient and economical power for your Xbox 360 Wireless Controller. Your new battery pack gives you:

- Up to 25 hours of play per full battery charge.
- High-performance NiMH rechargeable battery cell.
- Battery fuel gauge accessible from the Xbox Guide.

The Xbox 360 Rechargeable Battery Pack works exclusively with the Xbox 360 Wireless Controller and the Xbox 360™ video game and entertainment system. It can be recharged with either the Xbox 360 Play & Charge Kit (sold separately) or the Xbox 360 Quick Charge Kit (sold separately).

### **WARNING**

Before using this product, read this manual and the Xbox 360 console manuals for important safety and health information. Keep all manuals for future reference. For replacement manuals, go to [www.xbox.com/support](http://www.xbox.com/support) or call Xbox Customer Support (see "If You Need More Help").

The limited warranty covering this product is contained in the Xbox 360 Warranty manual (Volume 2).

Dispose of this product in accordance with local and national disposal regulations (if any), including those governing the recovery and recycling of waste electrical and electronic equipment (WEEE).

---

---

### **Rechargeable Battery Safety**

Improper use of batteries may result in battery fluid leakage, overheating, or explosion. Released battery fluid is corrosive and may be toxic. It can cause skin and eye burns, and is harmful if swallowed. To reduce the risk of injury:

- Charge only with the Xbox 360 Play & Charge Kit, the Xbox 360 Quick Charge Kit, or another Microsoft approved charger.
  - Keep batteries out of reach of children.
  - Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
  - If a battery leaks, remove the battery, taking care to keep the
- leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately. Before inserting a new battery, thoroughly clean the controller with a damp paper towel.
- Recycle or dispose of batteries in accordance with Local and National Disposal Regulations, including those governing the recovery and recycling of waste electrical and electronic equipment (WEEE).

Do not allow metal objects to touch the battery terminals; they can become hot and cause burns. For example, do not carry the battery in a pocket with keys or coins.

---

## INSERT YOUR BATTERY PACK

---

*To insert your rechargeable battery pack into your wireless controller:*

- 1 Press the tab on the top of the AA battery pack and pull down to detach it from the controller.
- 2 Insert the rechargeable battery pack into the battery compartment on the controller and push in to lock.

### NOTE

To avoid pinching your fingers when inserting, push only on the flat surface of the battery pack.

---

## CHARGE YOUR BATTERY PACK

---

Charge your Xbox 360 Rechargeable Battery Pack before first use and whenever it's depleted. To recharge your battery pack, you must use either the Xbox 360 Play & Charge Kit or the Xbox 360 Quick Charge Kit (sold separately). For more information, see the charge kit instruction manual that came with your charger.

### NOTES

- Fully charging the battery can take up to six hours using the Xbox 360 Play and Charge Kit, or up to two hours using the Xbox 360 Quick Charge Kit.
- The battery may become warm during charging or use. This is normal and does not indicate a problem with the battery.
- If the battery is unused for a long time, it may lose its charge. If this occurs, simply recharge the battery normally.

- 
- 
- Very depleted rechargeable battery packs can take up to 20 minutes to charge enough to power a controller for use with the Play & Charge Kit.
  - At first, or after storage for a long period of time, it can take from three to five full charge cycles for the battery pack to achieve its full capacity.
  - The battery has a limited life. The amount of play time will decrease as the battery pack ages or after many recharge cycles. The battery pack needs to be replaced when play time becomes too short or when it can no longer be charged.

## **CLEAN YOUR BATTERY PACK**

---

If it is necessary to clean the battery contacts, use only a dry cloth. Water or chemicals can damage the contacts.

## **TROUBLESHOOTING**

---

### **Battery Pack Charge Depletes Quickly**

The amount of play time will decrease as the battery pack ages or after many recharge cycles. The battery pack should be replaced when play time becomes unacceptably short or when it can no longer be charged.

---

---

## IF YOU NEED MORE HELP

---

Please go to [www.xbox.com/support](http://www.xbox.com/support) or call the Xbox Customer Support number:

Ireland: 1-800-509-186

TTY users: 1-800-509-197

United Kingdom: 0800-587-1102

TTY users: 0800-587-1103

Do not take your Xbox 360 console or its peripherals to your retailer for repair or service unless instructed to do so by an Xbox Customer Support representative.



### **Do Not Attempt Repairs**

Do not attempt to take apart, service, or modify the Xbox 360 console, power supply, or its peripherals in any way. Doing so could present the risk of serious injury or death from electric shock or fire, and it will void your warranty.

---

---

## COPYRIGHT

---

Information in this document, including URL and other Internet Web site references, is subject to change without notice. Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Microsoft Corporation.

Microsoft may have patents, patent applications, trademarks, copyrights, or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Microsoft, the furnishing of this document does not give you any license to these patents, trademarks, copyrights, or other intellectual property.

© 2005 Microsoft Corporation. All rights reserved.

Microsoft, Xbox, Xbox 360, and the Xbox logos are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.