

English

WARNING

Failure to properly set up, use, and care for the Xbox 360 video game and entertainment system can increase the risk of serious injury or death, or damage to the Xbox 360 video game and entertainment system. Read this manual and the manuals of any accessories for important safety and health information. Keep all manuals for future reference. For replacement manuals, go to www.xbox.com/support or call the Xbox Customer Support number provided on the back cover.

Before allowing children to use the Xbox 360 video game and entertainment system:

- 1 Determine how each child can use the Xbox 360 console (playing games, connecting to Xbox LIVE, replacing batteries, making electrical, AV cable, and network connections) and whether they should be supervised during these activities.
- 2 If you allow children to use the Xbox 360 console without supervision, be sure to explain all relevant safety and health information and instructions.







The Xbox 360 console will not play copied or "pirated" games or other unauthorized media. Attempting to defeat the Xbox 360 anti-piracy protection system may cause your Xbox 360 console to stop working permanently. It will also void your Limited Warranty, and may make your Xbox 360 console ineligible for authorized repair, even for a fee.

You must accept the terms and conditions of the Limited Warranty and this manual to use your Xbox 360 console. If you do not accept these terms and conditions, do not set up or use your Xbox 360 console and return it to Microsoft for a refund.




This symbol identifies safety and health messages in this manual and Xbox 360 accessories manuals.

For your warranty and other important information, see the Xbox 360 Warranty manual.

- 2 Your Xbox 360 Arcade System
- 3  Select a Location for Your Console
- 4 Connect to Your TV and Audio System
- 5  Connect the Console to Power
- 7 The Xbox 360 Wireless Controller
- 7  Set Up Your Wireless Controller
- 9 Xbox 360 Family Settings
- 10 Using the Disc Drive
- 11  Important Health Warnings About Playing Video Games
- 12 Play Games
- 12  Connect to Xbox LIVE
- 17 Watch Movies
- 17 Play CDs
- 18 Share Media from an Audio Player or Camera
- 19 Share Media from Your PC
- 20 Storage
- 21 Add Wireless Controllers
- 22 Connect Additional Accessories
- 23  Troubleshooting
- 193 Customer Support

YOUR XBOX 360 ARCADE SYSTEM

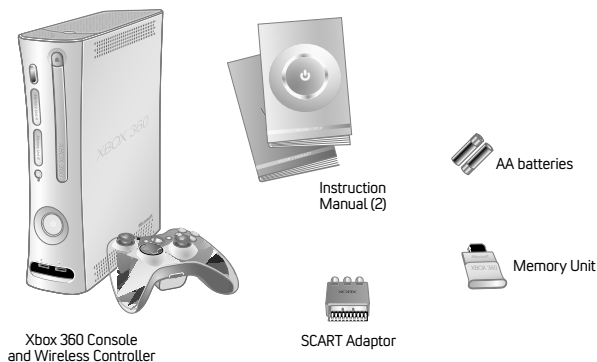

Thanks for purchasing your Xbox 360™ Arcade system from Microsoft. You're now at the center of a customizable experience that brings your games, your friends, and your digital entertainment together in one powerful package.

- Xbox 360 Arcade lets you play Xbox 360 games, DVD movies, and audio CDs.
- With high-speed Internet service, connect to millions of gamers on Xbox LIVE®. Instantly be a part of a community where you can play together, talk to your friends, and download new content.
- Stream pictures, music, and more to your Xbox 360 console by connecting to your Microsoft® Windows®-based PC or other devices such as digital cameras and portable music players.
- Take your saved games and your Xbox LIVE account everywhere you go. Even download content from Xbox 360 demo kiosks at participating retailers with your Xbox 360 Memory Unit.

SELECT A LOCATION FOR YOUR CONSOLE

Prevent the Console from Falling

If the Xbox 360 console falls and hits someone, especially a small child, it could cause serious injury. To reduce the risk of such injuries and damage to the Xbox 360 console, set up the Xbox 360 console according to these instructions. Place the console on a surface that:

- Is flat and level.
- Is stable and not likely to tip over.
- Allows all four feet of the console to be in contact with the surface.
- Is not likely to allow the console to slip or slide off.
- Is clean and free of dust and debris.

If the surface or console feet become dirty or dusty, clean them with a dry cloth. If the console is positioned vertically, put it on a surface where it is not likely to fall if it tips over.

Arrange all cables and cords so that people and pets are not likely to trip over or accidentally pull on them as they move around or walk through the area. When the console is not in use, you may need to disconnect all cables and cords from the front and rear of the console to keep them out of the reach of children and pets. Do not allow children to play with cables and cords.


Prevent the Console from Overheating

Do not block any ventilation openings on the console or power supply. Do not place the console or power supply on a bed, sofa, or other soft surface that may block ventilation openings. Do not place the console or power supply in a confined space, such as a bookcase, rack, or stereo cabinet, unless the space is well ventilated.

Do not place the console or power supply near any heat sources, such as radiators, heat registers, stoves, or amplifiers.


Avoid Smoke and Dust

Do not use the console in smoky or dusty locations. Smoke and dust can damage the console, particularly the DVD drive.

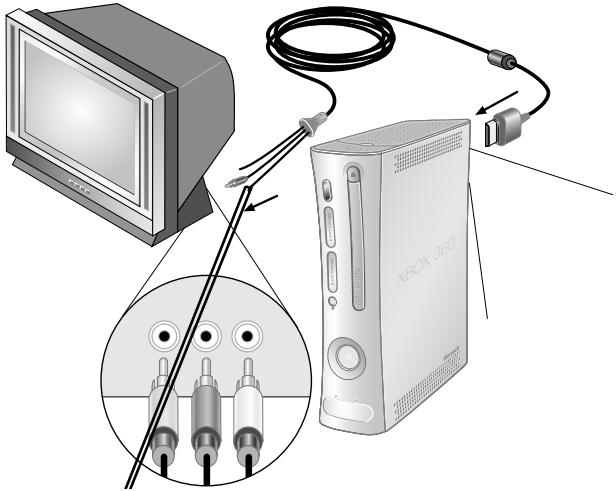

Connect to a Digital Audio System

If your system (typically, a receiver or amplifier) supports digital audio input, you can connect to digital audio rather than to the standard left and right audio by using the Xbox 360 Component HD AV Cable, the Xbox 360 Advanced SCART AV cable, the Xbox 360 VGA HD AV cable, or the Xbox 360 HDMI Cable (all sold separately). Digital audio should produce higher-quality sound. Follow the AV cable instructions for connecting digital audio.

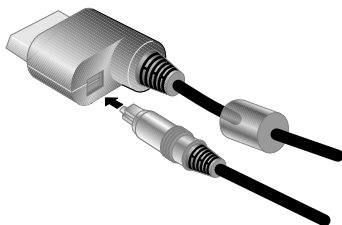



CONNECT THE CONSOLE TO POWER

Electrical Safety

As with many other electrical devices, failure to take the following precautions can result in serious injury or death from electric shock or fire or damage to the Xbox 360 video game and entertainment system.

Select an appropriate power source for your Xbox 360 console:

 - Use only the power supply unit and AC power cord that came with your console or that you received from an authorised repair centre. If you are not sure if you have the correct power supply unit, compare the model number on the power supply unit with the model number specified on your console. If you need a replacement power supply unit or AC power cord, contact Xbox Customer Support.
- Confirm that your electrical outlet provides the type of power indicated on the power supply unit (in terms of voltage [V] and frequency [Hz]). If you are not sure of the type of power supplied to your home, consult a qualified electrician.
- Do not use non-standard power sources, such as generators or inverters, even if the voltage and frequency appear acceptable. Only use AC power provided by a standard wall outlet.
- Do not overload your wall outlet, extension cord, power strip, or other electrical receptacle. Confirm that they are rated to handle the total current (in amps [A]) drawn by the Xbox 360 console (indicated on the power supply unit) and any other devices that are on the same circuit.
- Do not connect any other devices between the Xbox 360 power supply unit and the Xbox 360 console or between the power cord and the Xbox 360 power supply unit.

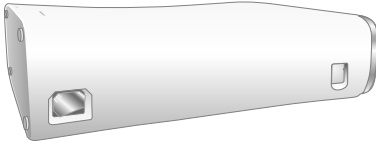

THE XBOX 360 WIRELESS CONTROLLER

Your wireless controller lets you experience the ultimate in wireless freedom with the same precision, speed, and accuracy as a wired controller.

Xbox Guide Button

The Xbox Guide button in the center of your controller puts the Xbox 360 experience at your fingertips. Press the Xbox Guide button to turn your console on. Once on, pressing the Xbox Guide button gives you immediate access to the Xbox Guide. To turn off your console, press and hold the Xbox Guide button for three seconds and confirm your selection.

Ring of Light

Composed of four quadrants, the Ring of Light that surrounds the Xbox Guide button on the controller and the Power button on the console is the Xbox 360 status indicator. When you connect a controller to your console, it is assigned a specific quadrant,

which glows green to indicate the controller's number and position. Each subsequent controller connected to the console (up to four) is assigned an additional quadrant.

If system problems should arise, the Ring of Light on the console will flash combinations of red. For more information, see "Troubleshooting."

Expansion Port

The expansion port (with 2.5-mm audio connector) on your controller lets you connect expansion devices like the Xbox 360 Headset (sold separately) to your controller. For more information, see the instruction manual for your controller expansion device.

Charge Port

The charge port on the front of your controller works exclusively with the Xbox 360 Play & Charge Kit (sold separately).

SET UP YOUR WIRELESS CONTROLLER

Before you can use your Xbox 360 Wireless Controller with your Xbox 360 console, you need to insert a battery pack.

Insert Batteries

The wireless controller uses disposable batteries or the Xbox 360 Rechargeable Battery Pack (sold separately). If you plan to use disposable batteries, you should familiarize yourself with the "Disposable Battery Safety" section that follows.

Disposable Battery Safety

Improper use of batteries may result in battery fluid leakage, overheating, or explosion. Risk of fire if batteries are replaced by an incorrect type. Released battery fluid is corrosive and may be toxic. It can cause skin and eye burns, and is harmful if swallowed. To reduce the risk of injury:

- Keep batteries out of reach of children.
- Do not heat, open, puncture, mutilate, or dispose of batteries in fire.
- Use only alkaline batteries, type AA (LR6).
- Do not mix new and old batteries.
- Remove the batteries if they are worn out or before storing your controller for an extended period of time. Do not


leave batteries in the AA battery pack when it is not installed in the controller.

- If a battery leaks, remove all batteries, taking care to keep the leaked fluid from touching your skin or clothes. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately. Before inserting new batteries, thoroughly clean the battery compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup.
- Dispose of batteries in accordance with local and national disposal regulations (if any).

Insert batteries according to the following instructions.

To insert batteries into the wireless controller AA battery pack:

- 1 Press the tab on the top of the AA battery pack and pull down to detach it from the controller.
- 2 Insert two new AA (LR6) batteries with their positive (+) and negative (-) ends as shown on the underside of the battery pack. For best performance, AA rechargeable batteries are not recommended.
- 3 Slide the AA battery pack back into place on the controller and push it in to lock.

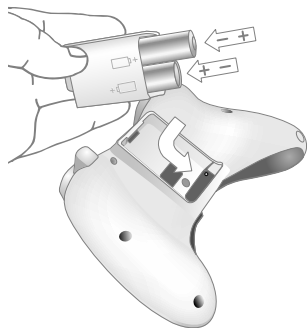

⚠ Remove Controller Batteries Aboard Aircraft

Before boarding any aircraft or packing the wireless controller in luggage that will be checked, remove any batteries from the wireless controller. The wireless controller can transmit radio frequency (RF) energy, much like a cellular telephone, whenever batteries are installed.

Connect Your Wireless Controller to Your Console

Your Xbox 360 Wireless Controller comes already wirelessly connected to your console, right out of the box. Should you need to reconnect your wireless controller to your console or connect to a different console, see "Add Wireless Controllers."

Turn Your Console and Wireless Controller On

To turn your console and controller on, press and hold the Xbox Guide button on your controller.

To turn on your console only, press the Power button on your console. To turn on your controller only, press the **Start** button on your controller.

NOTE

To avoid pinching your fingers when inserting, push only on the flat surface of the battery pack.

Turn Your Console and Wireless Controller Off

To turn your console and controller off, press and hold the Xbox Guide button on your controller for three seconds. Then select whether you want to turn off just your controller or both your controller and your console. (Selecting the console will turn off both the console and all connected controllers.)

Pressing the power button on your console will turn off both the console and any connected wireless controllers.

Select Language and Other Settings

The first time you turn on your Xbox 360 console, you'll be prompted to enter a language. Follow the prompts to select a language for your console.

You can change language and other console settings in the **System** area of the Xbox Dashboard, including time, audio, display, and automatic turn-off after six hours of non-use.

XBOX 360 FAMILY SETTINGS



The new Family Settings feature for Xbox 360 gives parents and caregivers the ability to provide age-appropriate entertainment through customised settings.

Console settings can limit the games and movies that can be played on your console. Xbox LIVE settings can customise the Xbox LIVE experience for each child account, even when playing away from home.

Apply Family Settings

To apply Family Settings for your games and Xbox LIVE

- 1 Select **System, Family Settings**.
- 2 Choose the settings you want to apply to your console and your Xbox LIVE accounts.

Family Settings for games and movies are based on the rating systems used in your locale. The Xbox 360 supports the rating systems used in most regions and countries.


Not all movies have the rating encoded on the DVD. These DVD movies will play regardless of your settings.

Xbox LIVE Settings

You can make sure that your family has a positive experience on Xbox LIVE by setting limits for each child account. Manage up to eight settings for each account and set different limits for each account. Your child's Xbox LIVE settings are pre-selected when their Xbox LIVE account is created. You can make changes at any time by selecting **System, Family Settings, Live Controls**, and choosing the child's account.

Family Settings for Xbox LIVE includes these features:

- Parental approval for adding individuals to your child's friends list.
- Limiting voice, video, and text chat to individuals on your child's friends list.
- Blocking or limiting the display of your child's profile information and online status.
- Blocking or limiting your child's ability to view content created by other gamers.
- Blocking access to Xbox LIVE multiplayer games.
- Preventing your child from purchasing items on Xbox LIVE Marketplace.

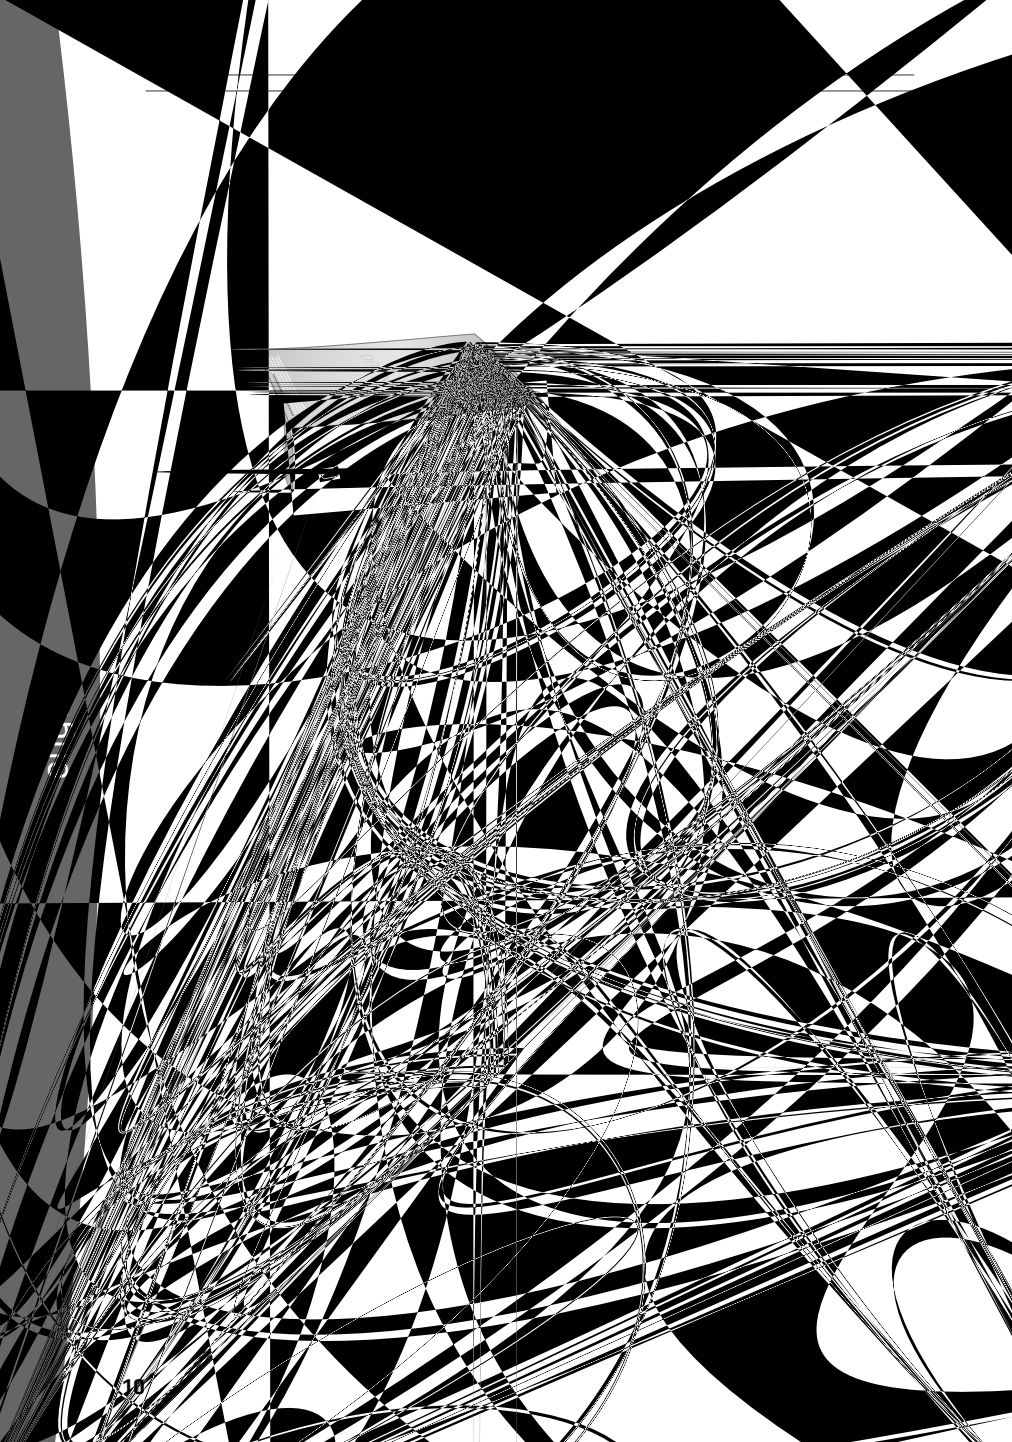

IMPORTANT HEALTH WARNINGS ABOUT PLAYING VIDEO GAMES

Photosensitive Seizures

A very small percentage of people may experience a seizure when exposed to certain visual images, including flashing lights or patterns that may appear in video games. Even people who have no history of seizures or epilepsy may have an undiagnosed condition that can cause these “photosensitive epileptic seizures” while watching video games.

These seizures may have a variety of symptoms, including lightheadedness, altered vision, eye or face twitching, jerking or shaking of arms or legs, disorientation, confusion, or momentary loss of awareness. Seizures may also cause loss of consciousness or convulsions that can lead to injury from falling down or striking nearby objects.

Immediately stop playing and consult a doctor if you experience any of these symptoms. Parents should watch for or ask their children about the above symptoms—children and teenagers are more likely than adults to experience these seizures. The risk of photosensitive epileptic seizures may be reduced by taking the following precautions:

- Sit farther from the TV screen.
- Use a smaller TV screen.
- Play in a well-lit room.
- Do not play when you are drowsy or fatigued.

If you or any of your relatives have a history of seizures or epilepsy, consult a doctor before playing.

Musculoskeletal Disorders

Use of game controllers, keyboards, mice, or other electronic input devices may be linked to serious injuries or disorders.

When playing video games, as with many activities, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. However, if you experience

symptoms such as persistent or recurring discomfort, pain, throbbing, aching, tingling, numbness, burning sensation, or stiffness, DO NOT IGNORE THESE WARNING SIGNS. PROMPTLY SEE A QUALIFIED HEALTH PROFESSIONAL, even if symptoms occur when you are not playing a video game. Symptoms such as these can be associated with painful and sometimes permanently disabling injuries or disorders of the nerves, muscles, tendons, blood vessels, and other parts of the body. These musculoskeletal disorders (MSDs) include carpal tunnel syndrome, tendonitis, tenosynovitis, vibration syndromes, and other conditions.

While researchers are not yet able to answer many questions about MSDs, there is general agreement that many factors may be linked to their occurrence, including medical and physical conditions, stress and how one copes with it, overall health, and how a person positions and uses their body during work and other activities (including playing a video game). Some studies suggest that the amount of time a person performs an activity may also be a factor.

Some guidelines that may help you work and play more comfortably and possibly reduce your risk of experiencing an MSD can be found in the Healthy Gaming Guide at www.xbox.com. These guidelines address topics such as:

- Positioning yourself to use comfortable, not awkward, postures.
- Keeping your hands, fingers, and other body parts relaxed.
- Taking breaks.
- Developing a healthy lifestyle.

If you have questions about how your own lifestyle, activities, or medical or physical condition may be related to MSDs, see a qualified health professional.

PLAY GAMES

The Xbox 360 console can play only game discs licenced by Microsoft for the Xbox 360 video game and entertainment system. Licenced games bear this logo:

To start a game:

- 1 Press the eject button to open the disc tray.
- 2 Place the Xbox 360 game disc on the disc tray with the label facing up (to the right if the console is vertical).
- 3 Press the eject button to close the disc tray. The game will start.

For the latest information about Xbox 360 games, go to www.xbox.com.

CONNECT TO XBOX LIVE

You can instantly become an Xbox LIVE Silver member by simply connecting an Ethernet cable (sold separately) to the Ethernet port on the back of the console. You can create a gamertag, access the Xbox LIVE Marketplace, view gamer cards, participate in chats, get voice messages, make friends, and use Xbox LIVE Family Settings. Xbox LIVE Silver members get limited-time gameplay through special events like free Xbox LIVE Gold weekend play, Xbox LIVE Game with Fame, and Xbox LIVE Prime Time.


If you're ready for the full Xbox LIVE experience, sign up for an Xbox LIVE Gold membership. Xbox LIVE Gold gives you all the features of Xbox LIVE Silver, plus online multiplayer gaming, enhanced matchmaking and feedback tools, privileges and rewards on Xbox LIVE Marketplace, and media features such as music and photo sharing.

Set Up Your Connection

Set up your Xbox LIVE connection using one of the following connection types. You can also set up a wireless home network connection using the Xbox 360 Wireless Networking Adapter (sold separately). For more information about setting up your connection and further home networking options, go to www.xbox.com/setup.

NOTE

You must have a high-speed (cable or DSL) Internet connection to play on Xbox LIVE. You must also have an Xbox 360 Hard Drive (included with the standard Xbox 360 system; sold separately for Xbox 360 Arcade) or Xbox 360 Memory Unit to store your Xbox LIVE account information. Xbox LIVE may not be available in your region.

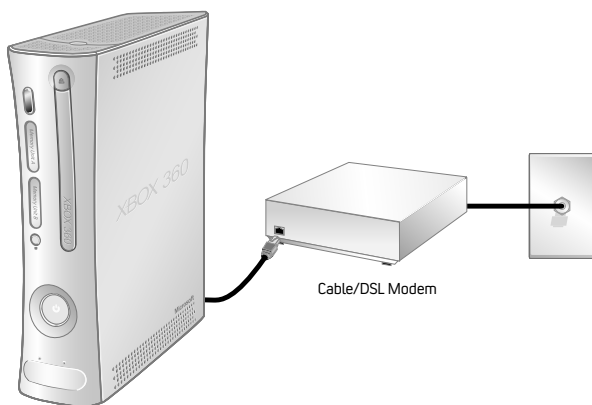


Cable/DSL Modem

Modem Connection

Choose a modem connection if you want the easiest way to set up and play and you don't want to share your Internet connection with your PC (or other device).

To set up a modem connection:

- 1 Connect one end of an Ethernet cable to the Ethernet port on your high-speed modem and the other end to the Ethernet port on the back of your Xbox 360 console.
- 2 Follow the on-screen instructions. You may need to enter information provided by your ISP in the System area of the Xbox Dashboard.

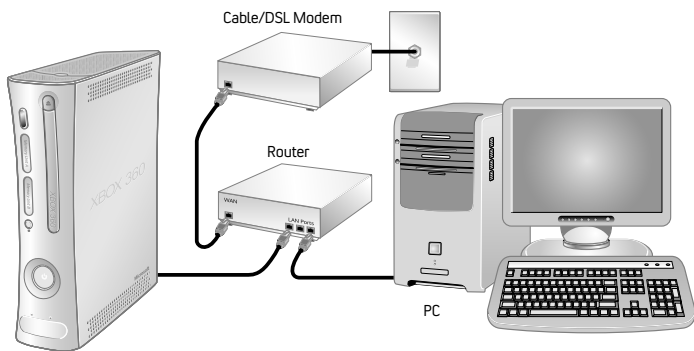

Router Connection

Choose a router connection if you want to share your Internet connection with your PC (or other device), your high-speed modem supports an Ethernet connection, and you want to be able to play on Xbox LIVE whether your PC is on or off.

To set up a router connection:


- 1 Connect one end of an Ethernet cable to the Ethernet port on your high-speed modem and the other end to the WAN or Uplink port on your router.
- 2 Connect one end of an Ethernet cable to an Ethernet LAN port on your router and the other end to the Ethernet port on your PC (or other device). Follow the instructions from your ISP to use your PC's browser or software to configure the router, then verify that your PC is connected to the Internet.



- 3 Connect one end of an Ethernet cable to an Ethernet LAN port on your router and the other end to the Ethernet port on the back of your Xbox 360 console.

NOTE

Some modems and devices may require a network hub instead of a router.

- 4 Follow the on-screen instructions. You may need to enter information provided by your ISP in the System area of the Xbox Dashboard.

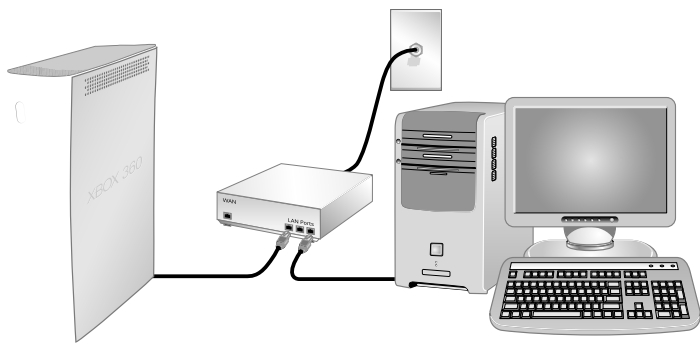

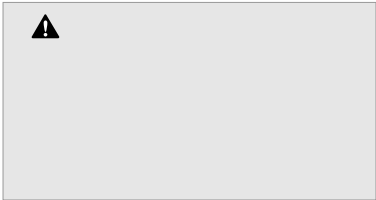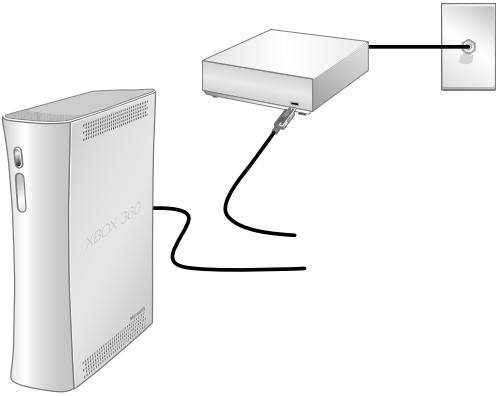

WATCH MOVIES

Your Xbox 360 console plays DVD movies. To enhance your DVD movie playback experience, consider using the Xbox 360 Universal Media Remote (sold separately).

To play DVD movies:

- 1 Press the eject button to open the disc tray.
- 2 Place the DVD movie on the disc tray with the label facing up (to the right if the console is vertical).
- 3 Press the eject button to close the disc tray. The DVD movie will begin playing.

- 4 Press any controller button other than the Xbox Guide button to show the DVD on-screen controls. Use your controller to control movie playback.

The Xbox 360 console can only play region 2 DVDs that have this logo:




PLAY CDs

The Xbox 360 console can play audio CDs that have this logo:



To play audio CDs:

- 1 Press the eject button to open the disc tray.
- 2 Place the audio CD on the disc tray with the label facing up (to the right if the console is vertical).
- 3 Press the eject button to close the disc tray. The CD will begin playing.

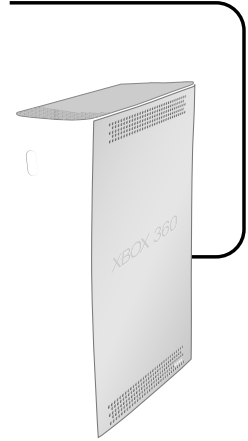

To access media files, including video, audio,
and pictures, from a Windows XP-based PC,

STORAGE

If you're going to connect to Xbox LIVE, you need a place to store your profile information, game information, and all of the great content available on Xbox LIVE. The Xbox 360 video game and entertainment system provides two data storage options: the Xbox 360 Memory Unit for portable storage and the Xbox 360 Hard Drive (sold separately) for all of your storage needs.

Memory Units

You can connect up to two portable memory units to the memory unit ports on the front of your console for additional storage. Memory units are smaller in capacity than the Xbox 360 Hard Drive, but extremely portable, letting you easily take your Xbox LIVE profile or saved games to other Xbox 360 consoles. You can also take your memory unit to participating retailers and download content from Xbox 360 demo kiosks.

With the Xbox 360 Memory Unit, you can take your saved games everywhere you go. Just save your game and transport your Xbox LIVE account.

The Xbox 360 Memory Unit has the following features:

- Support of Xbox LIVE downloadable content.
- Use of two memory units for flexible game storage.

The storage size of your memory unit is indicated on the front end of the unit. It is for use exclusively with the Xbox 360 system. If you're looking for more storage space, consider the Xbox 360 Hard Drive (sold separately).

NOTE

Because the Xbox 360 system software uses some of the memory from the memory unit when installed, less than the stated memory will be available to the user.

Connect Your Memory Unit

To connect your memory unit, insert it into either memory unit slot on the front of the Xbox 360 console. To disconnect, pull the memory unit out. Do not remove the memory

unit while your console is reading or saving data, as data loss and other system issues may occur.

NOTE

Avoid touching memory unit terminals with fingers or metal objects.

Personalize Your Memory Unit

You can personalize your memory unit by giving it a name.

To give your memory unit a name:

- 1 With the memory unit inserted, select **System, Memory**.
- 2 Highlight the memory unit.
- 3 Choose **Device Options** and rename your memory unit.

Once your memory unit has been personalized, you can identify it by its new name.

Copy or Delete Saved Items

You can copy any item on a memory unit to another Xbox 360 Memory Unit or Hard Drive. You can also free space on your memory unit by deleting items.

To copy or delete an item from your memory unit:


- 1 With the memory unit inserted, select **System, Memory**.
- 2 Select the memory unit.
- 3 Choose the type of item, then the specific item that you want to copy to another location or delete from the memory unit.

NOTE

Some content, such as ripped music and preloaded games, cannot be copied from a hard drive to a memory unit.

Removable Hard Drive

You can also install the Xbox 360 Hard Drive (sold separately), which provides extensive storage for downloadable game content, saved games, gamer profiles, and Xbox LIVE membership information. A hard drive is required to play original Xbox games on your Xbox 360 console.

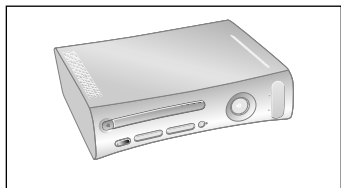



TROUBLESHOOTING

Follow these steps to troubleshoot any difficulties you may have with the Xbox 360 video game and entertainment system. If the steps in this troubleshooting section do not solve your problem, go to www.xbox.com/support or call the Xbox Customer Support number provided on the back cover.

Do not take your Xbox 360 console or its accessories to your retailer for repair or service unless instructed to do so by an Xbox Customer Support representative.

Do Not Attempt Repairs

Do not attempt to take apart, open, service, or modify the Xbox 360 console, power supply, or accessories. Doing so could present the risk of electric shock, fire, or damage to your Xbox 360 console.

Any evidence of any attempt to open and/or modify the Xbox 360 console, including any peeling, puncturing, or removal of any of the labels, will void the Limited Warranty and render the Xbox 360 console ineligible for authorised repair.

No Power

Confirm that you have an appropriate power source and check all connections between wall outlet and power supply, and power supply and console (see “Connect the Console to Power”). The power supply light should glow green when it is working properly.

No Picture

Connect the appropriate AV cable (see “Connect to Your TV and Audio System”). Turn on the TV. Select the video input on the TV (or VCR, if connected to a VCR) that displays the Xbox 360 game. Common names for video input include Input Select, AUX, Line In, Line, In, Input, Source, and EXT, depending on your TV or VCR type. For more information, see your TV or VCR manual. Don't connect both the included AV cable and an HDMI AV cable (sold separately) to the console at the same time.

No Sound

Check the AV connection (see “Connect to Your TV and Audio System”). If you're using digital audio, make sure the receiver is turned on and the output in your console's audio settings is set correctly. Don't connect both the included AV cable and an HDMI AV cable (sold separately) to the console at the same time.

Poor-Quality Sound

Clean the disc as shown in the Xbox 360 Warranty manual (Volume 2). Check the AV connection (see “Connect to Your TV and Audio System”). Play Dolby® Digital audio only on audio systems that support Dolby Digital. Select the audio output that is supported by your system or TV: stereo or Dolby® Surround for stereo speakers, mono for monaural speakers. If sound is coming from only one speaker, check that all audio cables are connected correctly.

Disc Tray Does Not Open

Make sure the removable faceplate on the front of the console is fully connected and properly aligned. Check the connection to power (see “Connect to Power”). Turn on the console by pressing the Power button.

Game, Movie, or Music Does Not Start

Play only supported discs (Xbox 360 games, audio CDs, DVD movies). Insert the disc as instructed in this manual and close the disc tray. Clean the disc as shown in the Xbox 360 Warranty manual (Volume 2).

Ring of Light Flashes

The lights in the console Ring of Light should glow solid while the console is on and flash when you press the eject button. If the Ring of Light flashes differently during operation, the console has an internal problem:

- Two left lights on console flash red: The console is too hot and will not play games until cooled down. Place the console in a well-ventilated area away from other heat sources. Once the console cools, the flashing will stop and the Xbox 360 console can be played. For more information, see “Select a Location for the Console”.

- Four lights on controller periodically flash green: No Ring of Light quadrant assignment. The controller is not connected or all four quadrants are full.
- All other patterns: Internal problem requires service. Contact Xbox Customer Support at the phone number on the back cover of this manual.

Wireless Controller Does Not Work

Turn on the wireless controller by pressing the Xbox Guide Button and connect the wireless controller to your console (see “Add Wireless Controllers”).

If lights spin longer than 15 seconds when connecting:

- Move the controller closer to the console.
- Make sure the batteries are fresh.
- Keep the console and controller at least three feet away from large metal objects, such as file cabinets and refrigerators.
- Metallic decorations or stickers on the console or controller can interfere with wireless controller performance. Remove decorations and try connecting again.
- Make sure the front of the console is positioned in the direction of the controller and away from nearby walls.
- Cordless phones (2.4 GHz), wireless LANs, wireless video transmitters, microwave ovens, some mobile/cell phones, and Bluetooth headsets can interfere with the operation of the controller. Turn these off or unplug them and retry connecting.
- If nothing else works, turn off your console, remove and reinsert the AA batteries or

Xbox 360 Rechargeable Battery Pack into the controller, and then repeat the steps given in “Add Wireless Controllers.”

Accessory Does Not Work

Use Xbox 360-compatible gameplay accessories that have this logo:

If an accessory is not supported by a specific game, the game may not play.



Cannot Save Game

The Xbox 360 Hard Drive or Memory Unit must have enough free space to save the game. Delete unwanted items from storage or attach an additional memory unit (sold separately) for more space.

Memory Unit Not a Listed Storage Device

Make sure the memory unit is fully inserted into the memory unit slot on the front of the console. Try the other memory unit slot to make sure that it is not causing the problem. If you have a second memory unit, try it out as well to determine whether the original memory unit is faulty.

NOTE

Damaged memory units will not appear in the Xbox Dashboard and could harm your Xbox 360 console. Memory units that have been crushed, immersed in liquids, or exposed to intense heat may be damaged beyond use and will not appear in your list of storage devices.)

© 2007 Microsoft Corporation. All rights reserved.

Microsoft, Windows, Xbox, Xbox 360, Xbox LIVE, the Xbox logos, and the Xbox LIVE logos are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.